

# FTClean

## *Cleaning FTDI USB Drivers*

Uninstalling Windows drivers should always be done by selecting to remove the drivers through the “Add/Remove Programs” utility. It is possible however, to selectively remove devices with a specific VID and PID combination by running the FTClean. The following is a step by step for using FTClean to remove drivers of ERE products.

- Run the FTClean, double-click on the FTClean icon

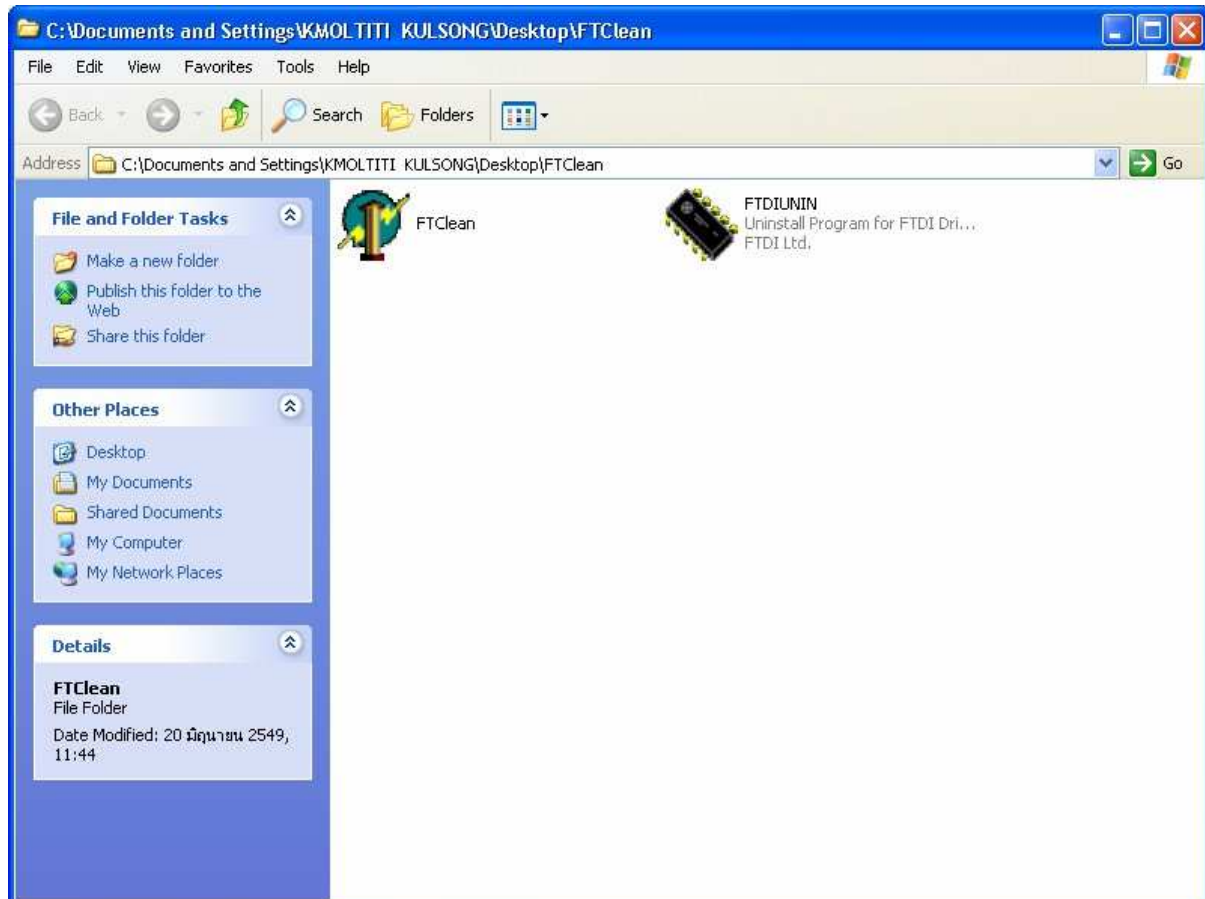


Figure 1. FTClean icon



Figure 2. FTClean program

- Complete VID and PID value of a driver which you need to remove. In this case the driver of ISPAVRU1 is chosen. So that VID is FTDI and PID is CEA0.



Figure 3. Complete VID and PID values

- Click on **Clean System** button



Figure 4. Disconnect all devices

- Click on **OK** button



Figure 5. Confirm the driver

- Click on **Yes** button

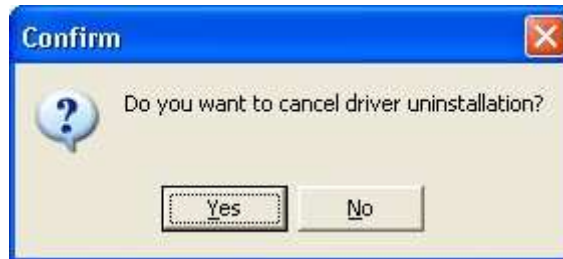


Figure 6. Confirm again

- Click on **No** button to start removing driver

PID values	Product names
CEA0	ISPAVRU1
CEA1	JTAGAVRU1

Table 1. PID value of each products

The table shows PID value of each product of ERE where the VID is FTDI.